



Get a free 2-year warranty



COMBINED BENCH GRINDER AND BRUSH PCTMB200

IN GOOD HANDS

TRANSLATION OF ORIGINAL INSTRUCTION MANUAL

DE / FR / PT / SP





WHO ARE WE?

Peugeot Professional Tools was born out of several obvious considerations.

The first was to combine the know-how of **Peugeot**, which has mastered the art of cutting since 1810, with the expertise of **Tivoly**, a metalworker since 1917, in order to create a wide range of machines and tools for construction and maintenance professionals.

It was also a natural step to want to serve craftsmen and small businesses driven by strong family and heritage values.

For these professionals, **Peugeot Outils Professionnels** offers machines and tools designed specifically for their needs. **These tools are reliable, durable, and can be repaired in France** and in countries under distribution agreements by local industrial and family partners.

Trustworthy equipment with a longer warranty, logistics, and

French after-sales service. The assurance of dealing with the people who assembled these tools and know every part that goes into them inside out.

From exceptional projects to everyday work, these tools are designed to withstand the most demanding conditions and stand the test of time.

Peugeot Professional Tools was born out of one obvious fact: that our tools are in good hands. The hands of those who work behind the scenes and give their all to satisfy their customers.

Since 1810, many things have changed, but the hands have remained the same. The hands of enthusiasts, craftsmen, dedicated technicians and installers, workers who are proud of themselves and their achievements.

Peugeot Professional Tools: tools in good hands.

THANK YOU FOR YOUR PURCHASE.

We are delighted that you have chosen Peugeot Professional Tools. Every detail has been designed to offer you an exceptional experience, and we hope you enjoy using it as much as we enjoyed creating it for you.

Your trust is essential to us, and we are delighted to accompany you every step of the way in your experience with the Peugeot Professional Tools brand.

Your purchase comes with a 2-year warranty, extendable to an additional 2 years.

To benefit from this, register at www.peugeot-outils-pro.com

If you have any questions or need assistance, our team is available to provide you with the best possible service.

To contact our after-sales service, visit [www.peugeot-outils-pro.com](#), call [+33\(0\)4.79.89.59.00](tel:+330479895900), or email service@peugeot-outils-pro.com.

Thank you for choosing Peugeot Professional Tools. Your satisfaction is our priority.

SUMMARY

1	INTRODUCTION.....	4
2	PICTOGRAMS.....	4
2.1	MACHINE SAFETY PICTOGRAMS	4
2.2	PICTOGRAMS USED IN THIS INSTRUCTION MANUAL	4
3	SAFETY	5
3.1	GENERAL SAFETY REQUIREMENTS.....	5
3.2	SPECIAL SAFETY REQUIREMENTS.....	6
3.3	OPERATOR PROTECTION	6
4	DESCRIPTION AND OPERATION	7
4.1	INTENDED USE OF THE MACHINE.....	7
4.2	CHARACTERISTICS	7
4.3	DESCRIPTION OF THE MACHINE.....	7
5	INSTALLATION.....	8
5.1	 PACKAGING.....	8
5.2	 HANDLING AND TRANSPORT	8
5.3	 INSTALLATION OF THE MACHINE	8
5.4	 ASSEMBLY	9
5.5	 ELECTRICAL CONNECTION	10
5.6	 INITIAL TEST AND INSPECTION BEFORE FIRST USE.....	10
6	USE.....	11
6.1	GRINDING/BRUSHING PROCEDURE.....	11
7	MAINTENANCE.....	13
7.1	 ADJUSTMENTS.....	13
7.2	 PROTECTIVE SCREENS.....	13
7.3	 CLEANING.....	13
7.4	 LUBRICATION.....	13
7.5	 TAKING THE MACHINE OUT OF SERVICE	13
7.6	 REPLACING A GRINDING WHEEL.....	14
7.7	 REPLACING THE BRUSH	15
8	EXPLODED VIEW	16
9	ELECTRICAL DIAGRAM.....	18
10	SOUND LEVEL.....	19
11	VIBRATION LEVEL.....	19
12	ENVIRONMENTAL PROTECTION.....	20
13	WARRANTY.....	20
14	DECLARATION OF CONFORMITY.....	21

1 INTRODUCTION



**For safety reasons, read these instructions carefully before using this machine.
Failure to follow the instructions will result in damage to persons and/or the machine.**

This instruction manual is intended for the operator, adjuster, and maintenance personnel.

This instruction manual is an important part of your equipment. It provides rules and guidelines that will help you use this machine safely and efficiently. You must familiarize yourself with the functions and operation by reading this instruction manual carefully. For your safety, it is particularly important that you read and observe all recommendations on the machine and in this instruction manual.

These recommendations must be strictly followed at all times when using and maintaining the machine. Failure to follow the safety guidelines and warnings in the instruction manual and on the machine and/or use other than that recommended in the instruction manual may result in machine failure and/or injury.

Please keep this instruction manual with the machine or in a place that is easily accessible at all times for future reference. Ensure that all personnel involved in the use of this machine can consult it periodically.

If the instruction manual is lost or damaged, please contact us or your dealer to obtain a new copy.

Always use PEUGEOT OUTILS PROFESSIONNELS components and parts. Replacing components or parts other than PEUGEOT OUTILS PROFESSIONNELS may cause damage to the machine and endanger the operator.

This manual describes the safety instructions to be followed by the user. It is the responsibility of the employer or user, in accordance with Article L.4122-1 of the Labor Code, to take care of their health and safety and that of other persons affected by their actions or omissions, in accordance, in particular, with the instructions given to them.

The employer must carry out an assessment of the specific risks associated with their activity, must train workers in the use of the machine and in the prevention of these risks, and must appropriately inform workers responsible for the use or maintenance of work equipment of the instructions or guidelines that apply to them.

2 PICTOGRAMS

2.1 MACHINE SAFETY PICTOGRAMS

Meaning of the safety pictograms affixed to the machine (keep them clean and replace them when they are illegible or detached):



Wearing protective eyewear is mandatory



Hearing protection must be worn



Gloves must be worn



Safety shoes must be worn



Respiratory mask must be worn



Do not wear loose clothing, wide sleeves, jewelry, bracelets, watches, wedding rings, etc.
Wear hair nets for long hair



Read the instructions carefully

2.2 PICTOGRAMS USED IN THESE INSTRUCTIONS



 
Direct danger to people and damage to the machine



Possible damage to the machine or its surroundings



Wear protective gloves when changing tools and cleaning



Technical skill level: operator, user



Technical skill level: adjuster, maintenance



Technical skill level: maintenance technician



Note



Electrical operations must be performed by personnel who are qualified and authorized to perform low-voltage electrical work.

3 SAFETY

3.1 GENERAL SAFETY REQUIREMENTS



To reduce the risk of fire, electric shock, mechanical shock, and personal injury when using power tools, follow basic safety precautions.

This instruction manual only takes into account reasonably foreseeable behavior.

Our machines are designed and manufactured with operator safety in mind.

We accept no liability for damage caused by inexperience, incorrect use of the machine and/or damage to it and/or failure to comply with the instructions and safety rules contained in this instruction manual.

As a general rule, accidents always occur as a result of misuse or failure to read the instruction manual.

We remind you that any modification to the machine will result in our disengagement.

Check the presence, condition, and operation of all protective devices before starting work.

Ensure that moving parts are functioning correctly, that there are no damaged components, and that the machine is operating perfectly during commissioning.

Only competent and authorized personnel are permitted to repair or replace damaged parts.

Keep the work area clean and tidy.

Ensure that the entire work area is visible from the work position. Cluttered work areas and workbenches are a potential source of injury.

Do not use the machine outdoors, in very humid conditions, or in the presence of flammable liquids or gases.

Position the machine in a sufficiently lit work area.

The machine must not be used by young workers under the age of eighteen.

Do not allow unauthorized persons, especially children or animals, to enter the work area, touch the tools or electrical cables, and keep them away from the work area.

Never leave the machine unattended while it is in operation. Always disconnect the power supply. Only leave the machine when it has come to a complete stop.



Do not force the tool; it will perform better and be safer at the speed for which it is designed.

Do not force small tools to do the work of larger tools.

Do not use tools for jobs for which they are not intended.



Do not damage the power cord.

Never pull on the power cord to remove it from the electrical outlet.

Keep the power cord away from heat sources, greasy areas, and/or sharp edges.

Protect the power cord from moisture and any potential damage. Check the power cord periodically and, if damaged, have it repaired by an authorized repairer.

A defective switch must be replaced by an authorized service center.

Do not use the machine if the switch does not control the stop or start functions.



Do not overestimate your strength.

Always maintain a stable position and good balance.

Pay attention to what you are doing, use common sense, and do not use the machine when tired.

Always use both hands to operate this machine.

The use of any accessories other than those described in the instruction manual may present a risk of injury to persons.

The user is responsible for their machine and must ensure that:

The reel is used by people who have read the instructions and are authorized to do so.

Safety rules are followed.

Users have been informed of the safety rules.

Users have read and understood the instruction manual.

Responsibilities for maintenance and any repairs have been assigned and observed.

Defects or malfunctions have been immediately reported to an authorized repairer or your dealer.

The reel must be used in the areas of application described in this manual.

Any use other than that indicated in these instructions may constitute a hazard.

Mechanical and/or electrical guards must not be removed or bypassed.

No modifications and/or conversions should be made.

PEUGEOT OUTILS PROFESSIONNELS declines all responsibility for damage caused to persons, animals, or objects as a result of failure to comply with the instructions and safety rules contained in this instruction manual.

3.2 SPECIAL SAFETY REQUIREMENTS



When a material that is hazardous to health is machined or used, or when there is a risk of dust emissions, the protective devices are designed to reduce the operator's exposure as much as possible. For this reason, a suitable extraction system must be used.



This grinder is not designed for machining materials that may produce flammable or explosive dust, such as aluminum, magnesium, and their alloys.

Allow the grinding wheel and brush to reach their maximum speed before starting to machine.
Adjust the protective screens and spark guards to protect the operator from flying sparks.
Wearing appropriate personal protective equipment is mandatory.
Always hold the workpiece correctly with both hands.
Do not strike the workpiece against the grinding wheel; apply pressure gradually.
Cool the workpiece from time to time in a water tank.
Do not touch the grinding wheels while they are in motion.
Wait until the grinding wheels have come to a complete stop before handling the grinder.
Before performing any maintenance or servicing, disconnect the power supply.
During continuous use, be careful of the surface of the grinder, as there is a risk of burns.
Do not add additional accessories for operations for which they are not designed.

Using an inappropriate accessory may result in accidents.
Do not mount a brush in place of a grinding wheel.
Do not use damaged grinding wheels.
Before installing a new grinding wheel, check that it is in good condition (see section 7.6 "Replacing a grinding wheel").
Only use grinding wheels recommended by PEUGEOT PROFESSIONAL TOOLS with a speed rating equal to or greater than the speed indicated on the tool's nameplate.
Always keep grinding wheels clean.
Do not clean grinding wheels while they are in motion.
When cleaning, wear protective goggles and gloves, and use a brush and a clean, dry cloth.
Do not immerse the machine in water or wash it with a pressurized water jet, as this may cause water to enter the electrical components.
Do not use solvents or aggressive detergents.
Store the machine in a dry place out of the reach of children.



Hazards:

Mechanical:

- Risk of entanglement or entanglement for the operator during manual operations near a grinding wheel.
- Risk of the operator being dragged in or trapped during manual operations between a grinding wheel and the elements of the grinder, especially near the workpiece support or between a grinding wheel and the workpiece.
- Risk of friction or abrasion for the operator during accidental contact with a rotating grinding wheel.

Materials and products:

- Risk of inhalation of harmful dust released by grinding wheels for the operator or other persons with access to the area around the grinder during grinding operations.

Fall or overturning of the machine:

- Risk of injury to the operator if the grinder or base are not secured.

3.3 OPERATOR PROTECTION



For operator safety, ensure that the protective screens and grinding wheel guards are in good condition and in place. Ensure that non-working parts are always covered by a protective guard.

This machine is designed for a single operator.
The operator must wear appropriate personal protective equipment:

- Safety glasses.
- Hearing protection.
- Safety shoes.
- Protective gloves.
- Respiratory protection.

The operator must wear close-fitting clothing and, if necessary, hair coverings for long hair.
The operator must not wear, for example:

- Loose-fitting clothing with wide sleeves.
- Bracelets, watches, wedding rings, jewelry.
- Any other objects that could become caught in the moving parts of the machine.



4 DESCRIPTION AND OPERATION

4.1 INTENDED USE OF THE MACHINE

The PCTMB200 brush grinder is a bench or pedestal grinder intended for regular use in dry tangential grinding and brushing of ferrous metals (grinding or brushing a workpiece surface using the periphery of the grinding wheel or brush).

The manufacturer declines all responsibility in the event of misuse, grinding or brushing of materials other than those mentioned above.

Under proper conditions of use and maintenance, safe operation and work are guaranteed for several years.


To do this, explore the machine's various functions.

4.2 CHARACTERISTICS

- European manufacture
- Cast aluminum body
- Mounted on sealed, self-lubricating ball bearings
- On/off switch equipped with a safety device with a voltage failure coil
- Locking punch-stop switch
- Polycarbonate protective screen
- Internal automatic thermal protection in the motor
- Pressed steel casings equipped with a dust collection nozzle
- Safety and compliance:
 - space between the grinding wheel and the casing less than 5 mm
 - spark guard and adjustable tool holders 2 mm from the grinding wheel
 - No opening under the tool holder

	Grinding wheel (mm)	Brush (mm)	Grit of grinding wheel	Type wire Brush	Rotation Rotation (rpm)	Power	Motor power (kW)	Weight (kg)	Dimensions (W x H x D) (mm)
PCTMB200	200 x 25 x 20	200 x 25 x 20	A 60 M	Steel Brass-plated	2800	230 V single-phase	0.75	22.1	650 x 320 x 290

4.3 MACHINE DESCRIPTION

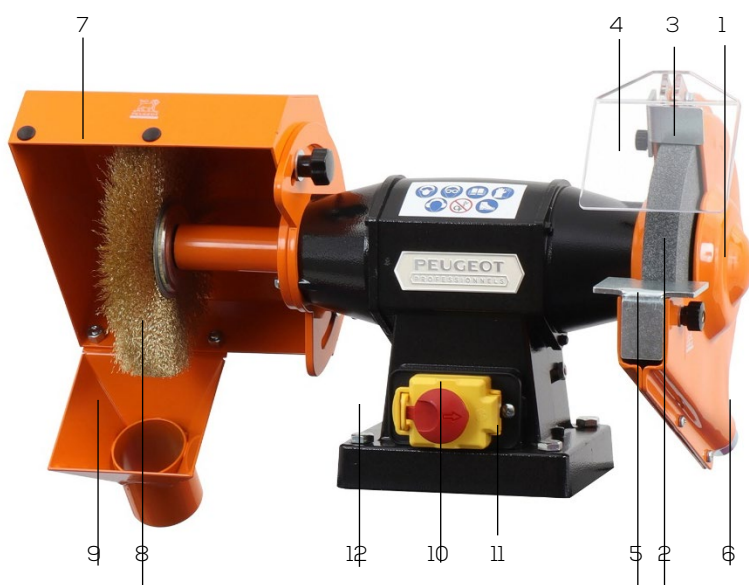

1. Grinding wheel housing
2. Grinding wheel A 60 M
3. Adjustable spark guard on grinding wheel side
4. Grinding wheel side protective screen
5. Tool holder on grinding wheel side
6. Dust collection nozzle on grinding wheel side
7. Brush guard
8. Brush
9. Brush side dust collection nozzle housing
10. ON/OFF switch with lock-off feature
11. Base
12. Mounting holes

5 INSTALLATION

5.1 PACKAGING



A small moisture-proof bag may be included in the packaging. Keep it out of the reach of children and dispose of it.

The reel is packaged in a cardboard box for easy handling and storage.

When unpacking, remove each part of the reel, check its overall condition, and then proceed with assembly.

If the product does not appear to be in good condition or if any parts are broken or missing, contact your retailer. Keep the instruction manual for future reference.

5.2 HANDLING AND TRANSPORT

Given the weight (22.1 kg) and dimensions of the machine, it can be handled by a single person.

5.3 INSTALLING THE MACHINE



Secure the reel to a suitable base or workbench using the anchor points provided on the base. Connect a suitable extraction system to the dust collection nozzles, if necessary.



To position the machine at the workstation, install the reel at a height that allows for comfortable working. The recommended height of the support is 70 to 80 cm from the floor.



Installation environment:

- Power supply voltage in accordance with the machine's specifications.
- Ambient temperature between +5°C and +35°C.
- Relative humidity not exceeding 90%.
- Sufficient ventilation at the installation site.
- Work area sufficiently lit for safe working: lighting must be 500 LUX.

Procedure:

1. Secure the base or workbench to the floor.
2. If necessary, fill the base with sand to reduce any vibrations and stabilize the unit.
3. Secure the drum to the base or workbench by inserting 4 screws (M8) into the holes and then tightening them firmly with the appropriate nuts.



For safety reasons, we remind you that it is mandatory to secure the reel to a base or workbench.



There is a risk of breaking the reel support if it is tightened excessively on a deformed surface.

5.4 ASSEMBLY



The spark guards and tool holders must be adjusted regularly as the grinding wheels wear down to maintain the specified distance from the outer edge of the grinding wheels.



Ensure that the grinding wheel clamping nuts are securely tightened and check the integrity of the grinding wheels before use (see section 7.6 "Replacing a grinding wheel").




Replace a grinding wheel when it has reached a diameter of 140 mm.
Do not mount/use a grinding wheel with a diameter of less than 140 mm.

Grinding wheel side:

1. Attach the spark guard (35) to the grinding wheel covers (3 and 29) and adjust it to a maximum of **5 mm** from the peripheral edge of the grinding wheel.
2. Attach the transparent protective screen (27) to the spark guard (35) and adjust it to protect the operator.
3. Attach the tool holder (28) to the grinding wheel covers (3 and 29) and adjust it to a maximum of **2 mm** from the peripheral edge of the grinding wheel.




4. The diameter of a grinding wheel decreases as it wears down and its distances increase.

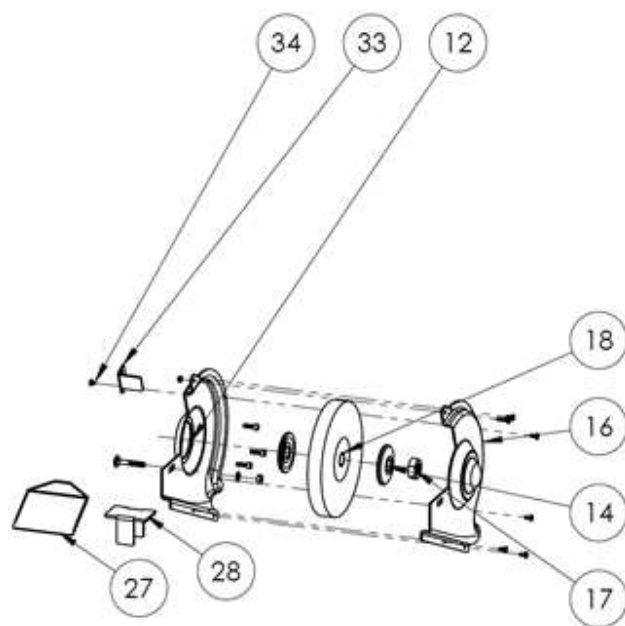

Brush side:

1. Secure the brush guard (33) to the bracket (31) using the clamping knobs (38).
2. Attach the plugs (35 and 41) to the brush cover (33).
3. Secure the dust collection nozzle cover (34) to the brush cover (33) using the screws, nuts (21), and washers (36).

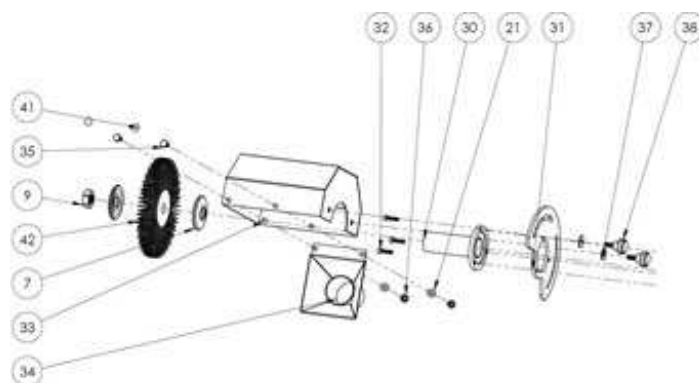

5.5 ELECTRICAL CONNECTION



Electrical work must be carried out by qualified personnel authorized to perform low-voltage electrical work.



Check that the grinding wheels rotate in the same direction as indicated by the arrow on the grinding wheel housings. The warranty does not cover damage caused by incorrect connection.



ELECTRICAL PRESENCE

Ensure that the mains supply voltage corresponds to that of the machine and that the electrical outlet is in good condition and earthed.

Check that the electrical outlet in your installation is compatible with the plug on the machine's power cable.

The electrical outlet must comply with "EN 60309-1" standards.

Connect the machine using the power cable.

Ensure that the machine switch is in the "0" position.

Check that the electrical installation to which the machine will be connected is properly grounded in accordance with current safety standards.

We remind users that there must always be a magnetothermal protection device upstream of the electrical installation to protect all conductors against short circuits and overloads.

This protection must always be selected based on the electrical characteristics of the machine, as specified on the nameplate:

- Voltage: 230 V single-phase
- Frequency: 50 Hz
- Current: 3,26 A
- Motor power: 0.75 kW



Use cables and reels of a cross-section and length appropriate for the power of the machine and unroll them completely. Electrical connections and extension cords must be protected from splashes and kept on dry surfaces.



Use of the machine with a damaged power cord is strictly prohibited. Regularly check the condition of the power cord, cable gland, and switch.



Do not remove the plug from the electrical outlet by pulling on the power cord; pull only on the plug.

5.6 INITIAL TEST AND INSPECTION BEFORE FIRST USE

- Check that the protective devices are present, intact, and in good working order.
- Check that the moving parts are working properly and that there are no damaged components.
- Check the condition of the grinding wheels.
- Check that the wheel is securely attached to the workbench or its base and that the base is secured to the floor.
- Check that the machine operates perfectly when idle.

6 USE



Follow the specific safety instructions for grinders.



Before starting operation, familiarize yourself with the controls.



Ensure that the grinding wheel clamping nuts are securely tightened and check the integrity of the grinding wheels before use (see section 7.6 "Replacing a grinding wheel").



Before any maintenance or servicing, disconnect the power supply.



Wearing appropriate personal protective equipment is mandatory.



During continuous use, be careful of the surface of the grinder, as there is a risk of burns.



We urge you to periodically check the condition of your grinder, in particular the distance between the tool holder and the grinding wheel, the condition of the grinding wheels, and the condition of the power supply.

6.1 GRINDING/BRUSHING PROCEDURE



Keep your hands away from the machining areas when the machine is in operation.



During machining, there is a risk of sparks or debris being projected.



Manual grinding must always be carried out with great care, as there is a risk of contact with the grinding wheel (entrapment, burns, pinching, abrasion, or crushing).



In the event of significant vibrations, identify the grinding wheel that is out of balance and rectify it with a suitable tool to rebalance it.



**Tool holders must always be used in a horizontal position.
Screens must always be kept clean.**



Do not apply excessive pressure to the tool. Machining performance is not improved by applying high pressure to the tool, but the service life of the tool and machine will be reduced.

Operating cycle

A. Instructions:

1. Adjust the protective screen (12 fig. 2), spark guard (39 fig. 2), and tool holder (23 fig. 2) so as to avoid contact with the grinding wheel.
2. Adjust the brush guard (33 fig. 2) to protect the operator from flying sparks.
3. Ensure that you are equipped with protective equipment.
4. Always wear protective eyewear.
5. Plug the power cord (15 fig. 2) of the power take-off into the electrical outlet.
6. Unlock the switch's safety lock (16 fig.2).
7. Press the green "I" button on the switch (16 fig.2) to start the motor and allow the grinding wheel and brush to reach their speed.

B. Grinding:

- Gradually bring the workpiece into contact with the grinding wheel, leaning on the tool support.



- The workpiece must always be held with both hands and cooled from time to time in a water tray.
- The grinding wheel (28 fig.2) has a fine grain (A 60 M) and is suitable for dry sharpening tools (axes, sickles, drills, chisels, blades, etc.) made of hard metals.

Original grinding wheel:

A 60 M gray corundum

Ø 200 x 25 x 20 mm (reference: PPA603402001)

C. Brushing:

- Hold the workpiece firmly with both hands, then apply gradual pressure without pressing too hard to prevent the machine from losing its normal speed. The workpiece must be cooled from time to time in a water tank.
- The brush with brass-plated steel wire bristles is suitable for stripping, cleaning, derusting, and polishing ferrous and non-ferrous metal parts, wood, plastics, and other materials.

Original brush:

Brass-plated steel wire brush

Ø 200 x 25 x 20 mm (reference: PPA600402001)



**Allow the grinding wheels to reach their maximum speed before starting to machine.
Do not brake or block the grinding wheels by applying excessive pressure.**



Spark guards and tool holders must be adjusted regularly as the grinding wheels wear down to maintain the specified distance from the outer edge of the grinding wheels.

A. Stopping:

- Press the lock-on emergency stop button (19 fig. 2) to stop the bench grinder. The grinding wheels will continue to rotate for a few seconds before coming to a complete stop.



Wait until the grinding wheels have come to a complete stop before handling the bench grinder.

7 MAINTENANCE



Disconnect the power supply before performing any maintenance or servicing.
Wear gloves and protective eyewear, and use a clean, dry cloth, brush, long-handled brush, hook, magnetic collector, or vacuum cleaner for all cleaning operations.



Do not use an air gun to remove dust.
Do not use solvents or aggressive detergents.
Do not immerse the machine in water or wash it with a water jet.

To maintain the efficiency of the reel and its components, it is necessary to perform maintenance on the machine.
 The most important maintenance tasks are listed below.


Failure to perform the prescribed tasks will result in premature wear and reduce the performance of the machine.



7.1 ○○○ ADJUSTMENTS

Regularly check the distances in relation to the wear of the grinding wheel:

- The spark guards must be set to a maximum of 5 mm from the outer edge of the grinding wheel.
- Tool holders must be set to a maximum of 2 mm from the peripheral edge of the grinding wheel.

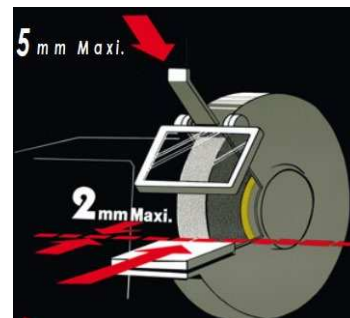

7.2 ○○○ PROTECTIVE SCREENS

- Regularly check that the protective screens are clean and replace them if they are damaged.
- Maximum service life of a protective screen: 2 years.

7.3 ○○○ CLEANING

- Clean the grinder regularly, especially inside the grinding wheel housing, to prevent a build-up of machining dust.

7.4 ○○○ LUBRICATION

- The motor bearings are lubricated for life and require no maintenance.

7.5 ○○○ TAKING THE MACHINE OUT OF SERVICE

If the lathe is not going to be used for an extended period of time, it is recommended that you proceed as follows:

1. Disconnect the power plug from the power supply.
2. Clean the machine carefully.
3. Cover the machine, if necessary.

7.6 REPLACING A GRINDING WHEEL



Disconnect the machine from the power supply before performing this operation.



**Do not install a brush in the grinding wheel housing or brush housing.
Replace grinding wheels with models of the same weight and dimensions.**



**Replace a grinding wheel when it reaches a diameter of 140 mm.
Do not install/use grinding wheels with a diameter of less than 140 mm.**



Do not use damaged grinding wheels.



Only use grinding wheels recommended by PEUGEOT OUTILS PROFESSIONNELS with a speed equal to or greater than the speed indicated on the tool's nameplate.



Checking the integrity of a new grinding wheel:

Before installing a new grinding wheel, perform a sound test to check its overall condition:

1. To perform this test, the grinding wheels must be dry and clean. Otherwise, the sound emitted may be weakened.
2. Using a non-metallic object (wooden handle of a screwdriver or wooden mallet), tap lightly on the side of the grinding wheel: a light tap on an intact grinding wheel produces a clear, pleasant sound.
3. On the other hand, if the sound emitted is dull or cracked, the grinding wheel should not be used.



Handle grinding wheels with care. If a grinding wheel has been knocked or dropped, do not use it (always refer to the instructions supplied with the grinding wheel).



We recommend the use of vitrified grinding wheels. Different qualities are available.

Refer to the table on the grinding wheels or, for more details, to our self-service packaging of grinding wheels for bench grinders.

Procedure:

1. Ensure that the power cable (18 fig. 2) is disconnected.
2. Remove the spark guard (32 or 33 fig. 2) and the tool holder (26 fig. 2).
3. Remove the outer grinding wheel housing (12 or 13 fig. 2) by unscrewing the screws (14 fig. 2).
4. Hold the rotor shaft (3 fig. 2) in position using a hex key on the end of the shaft.
5. Unscrew the grinding wheel nut with a flat wrench (10 or 11 fig. 2).
6.  The nut on the left side (11 fig. 2) has a left-hand thread, which means it must be loosened in a clockwise direction.
7. Remove the outer grinding wheel flange (9 fig. 2).
8. Replace the worn grinding wheel (30 or 31 fig. 2) with a new one (make sure the flanges and mounting shaft are clean before refitting a grinding wheel).
9. Check that the bore of the grinding wheel matches the grinding wheel shaft. Use reduction rings if necessary.
10. Refit the outer grinding wheel flange (9 fig. 2).
11. Screw the clamping nut (10 or 11, fig. 2) back on and tighten it firmly, but without overdoing it. This nut tends to lock itself due to its own inertia.
12. Refit the outer grinding wheel cover (12 or 13 fig. 2).
13. Ensure that the lateral distance between the grinding wheel and the casing is less than 10 mm.
14. Reassemble the previously disassembled components.

7.7 REPLACING THE BRUSH

Disconnect the machine from the power supply before performing this operation.



**Do not mount a grinding wheel in the brush housing or grinding wheel housing.
Replace the brush with a model of the same weight and dimensions.**



Do not use damaged brushes.



Only use brushes recommended by PEUGEOT PROFESSIONAL TOOLS with a speed equal to or greater than the speed indicated on the tool's nameplate.




We urge you to periodically check the condition of your grinder, in particular the condition of the brush and the power supply.

Procedure:

1. Ensure that the power supply cable (15 fig. 2) is disconnected.
2. Remove the brush cover (33 fig.2) by unscrewing the clamping knobs (38 fig.2).
3. Hold the rotor shaft (29 fig. 2) in position using a hex key on the end of the shaft.
4. Unscrew the brush nut with a flat wrench (9 fig. 2).
5.  The brush nut on the left side (9 fig. 2) has a left-hand thread, which means it must be loosened clockwise.
6. Remove the outer brush flange (7 fig. 2).
7. Replace the worn brush (42 fig. 2) with a new one (make sure the flanges and mounting shaft are clean before refitting a brush).
8. Check that the brush bore matches the brush shaft. Use reduction rings if necessary.
9. Refit the outer brush flange (7 fig. 2).
10. Re-tighten and lock the clamping nut (9 fig.2) firmly, but without overdoing it. This nut tends to lock itself due to its own inertia.
11. Refit the brush housing (33 fig. 2).

8 EXPLODED VIEW

EXPLODED VIEW PCTMB200 (VIEW 01)

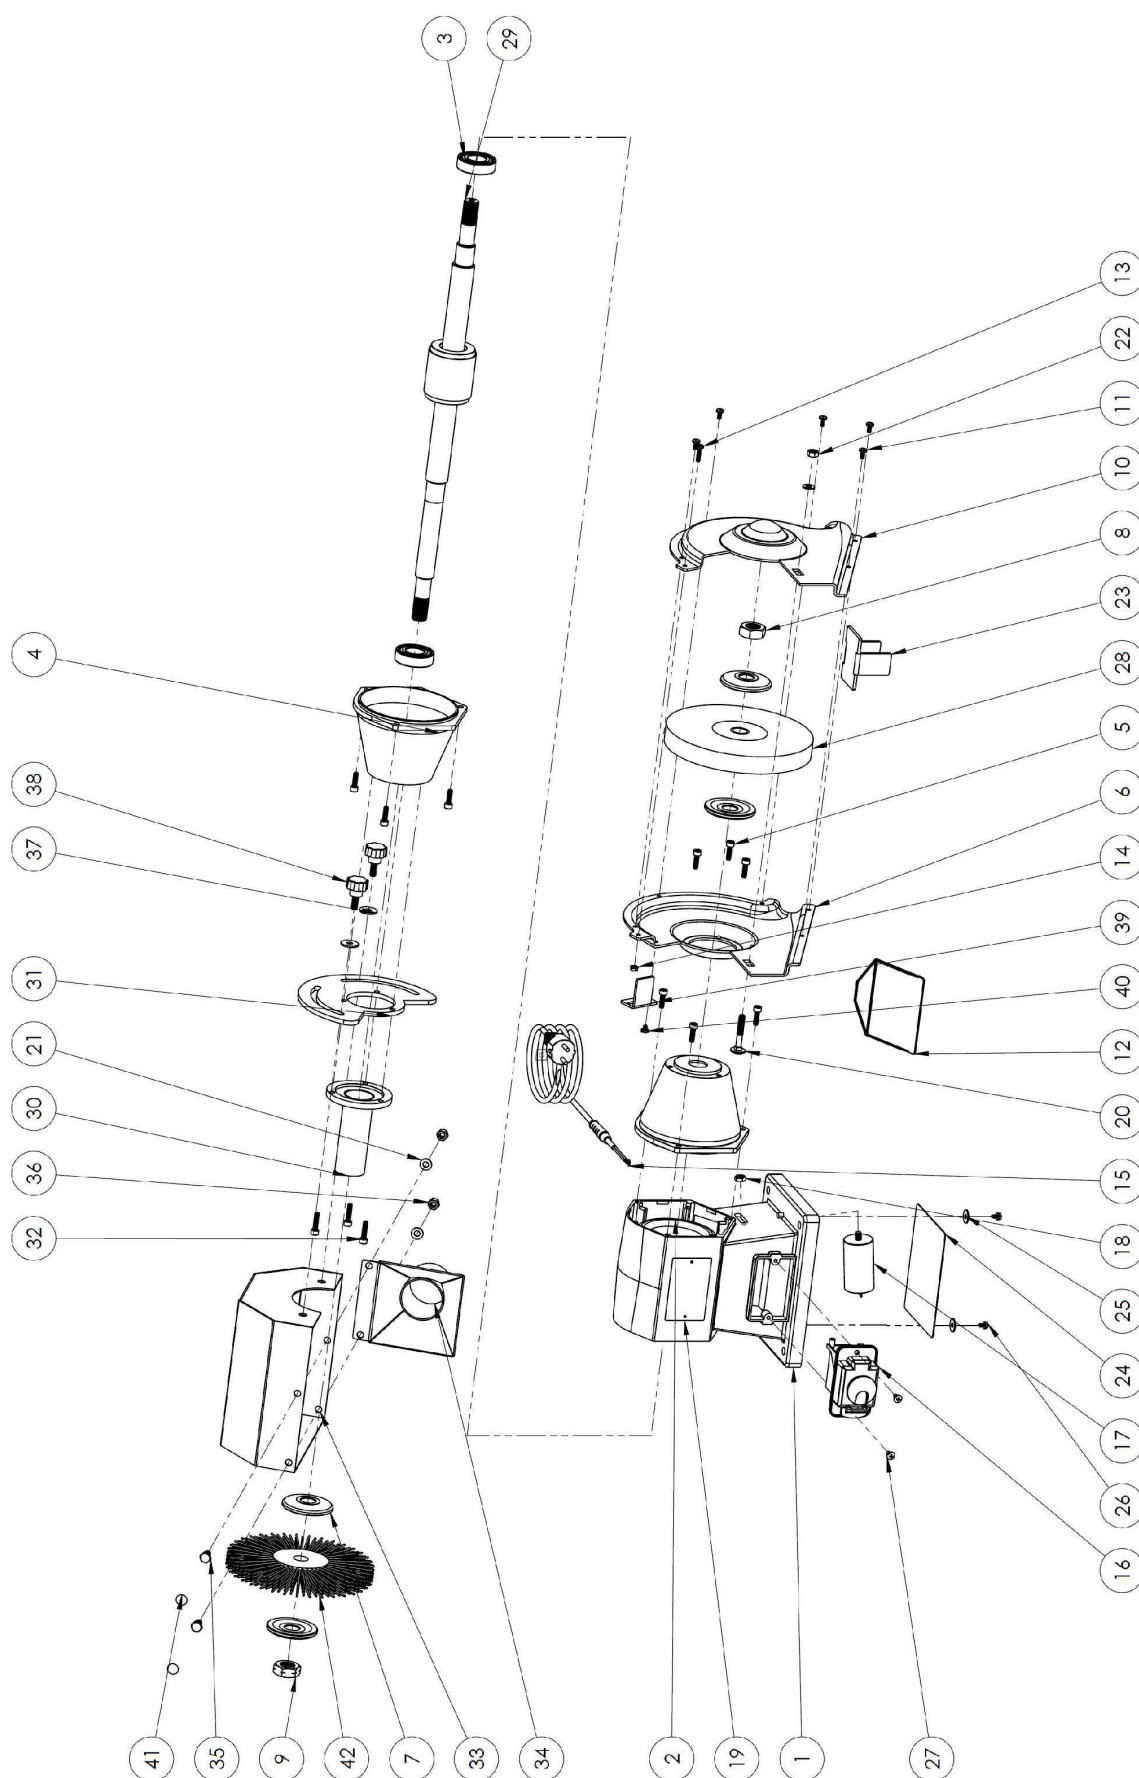


EXPLODED VIEW NOMENCLATURE PCTMB200 (VIEW 01)

Reference	Description	Quantity
01	MOTOR FRAME 0.675KW	1
02	STATOR 230V 50HZ 0.675KW	1
03	BEARING 6205 ZZ	2
04	MOTOR HOUSING 0.675KW D. 200MM	2
05	SCREW 6X20	9
06	INSIDE GRINDING WHEEL HOUSING RIGHT SIDE D. 200MM #RAL 2008	1
07	FLANGE FOR DIA 200MM	4
08	M20 NUT FOR SECURING GRINDING WHEEL ON LEFT SIDE	1
09	M20 GRINDING WHEEL CLAMPING NUT, RIGHT SIDE	1
10	OUTER GRINDING WHEEL COVER, RIGHT SIDE, D. 200MM #RAL 2008	1
11	5X10 SCREW	5
12	PROTECTIVE SCREEN	1
13	5X20 SCREW	1
14	M5 NUT	1
15	H05VV-F 3X0.75MM² ELECTRICAL POWER CABLE	1
16	230V Single-Pole Switch	1
17	16µF CAPACITOR	1
18	M8 NUT UNI 5589	1
20	8X50 BOLT UNI 5587	1
21	M8 WASHER UNI 6592	3
22	M8 UNI NUT 5588	1
23	TOOL HOLDER TE DIA 200MM	1
24	0.675KW MOTOR FRAME PROTECTIVE PLATE	1
25	M6 WASHER	2
26	4.8X9.5 SCREW UNI 6950 -7976	2
27	4.8X13 SCREW	2
28	XPLR+MT A60M GRINDING WHEEL, GREY CORUNDUM, D.200 X 25 X 16	1
29	0.675KW ROTOR	1
30	0.675KW ROTOR AXLE COVER, BRUSH SIDE, D. 200MM	1
31	BRUSH COVER SUPPORT D. 200MM #RAL 2008	1
32	SCREW 6X25	3
33	BRUSH COVER D. 200MM #RAL 2008	1
34	BRUSH HOUSING NOZZLE D. 200MM #RAL 2008	1
35	BRUSH COVER BOLT	2
36	M8 NUT UNI 5587	2
37	M8 WASHER	2
38	30MM DIAMETER TIGHTENING KNOB BRUSH COVER M8X20	2
39	SPARK ARRESTOR RIGHT SIDE	1
40	5X6 UNI SCREW 7985	1
41	CAP FOR BRUSH HOUSING PLUG	2
42	XPLR+BT CIRCULAR BRUSH D.200 X 25 X 32 BRASS CORRUGATED WIRE	1

9 ELECTRICAL DIAGRAM

PCTMB200 ELECTRICAL DIAGRAM

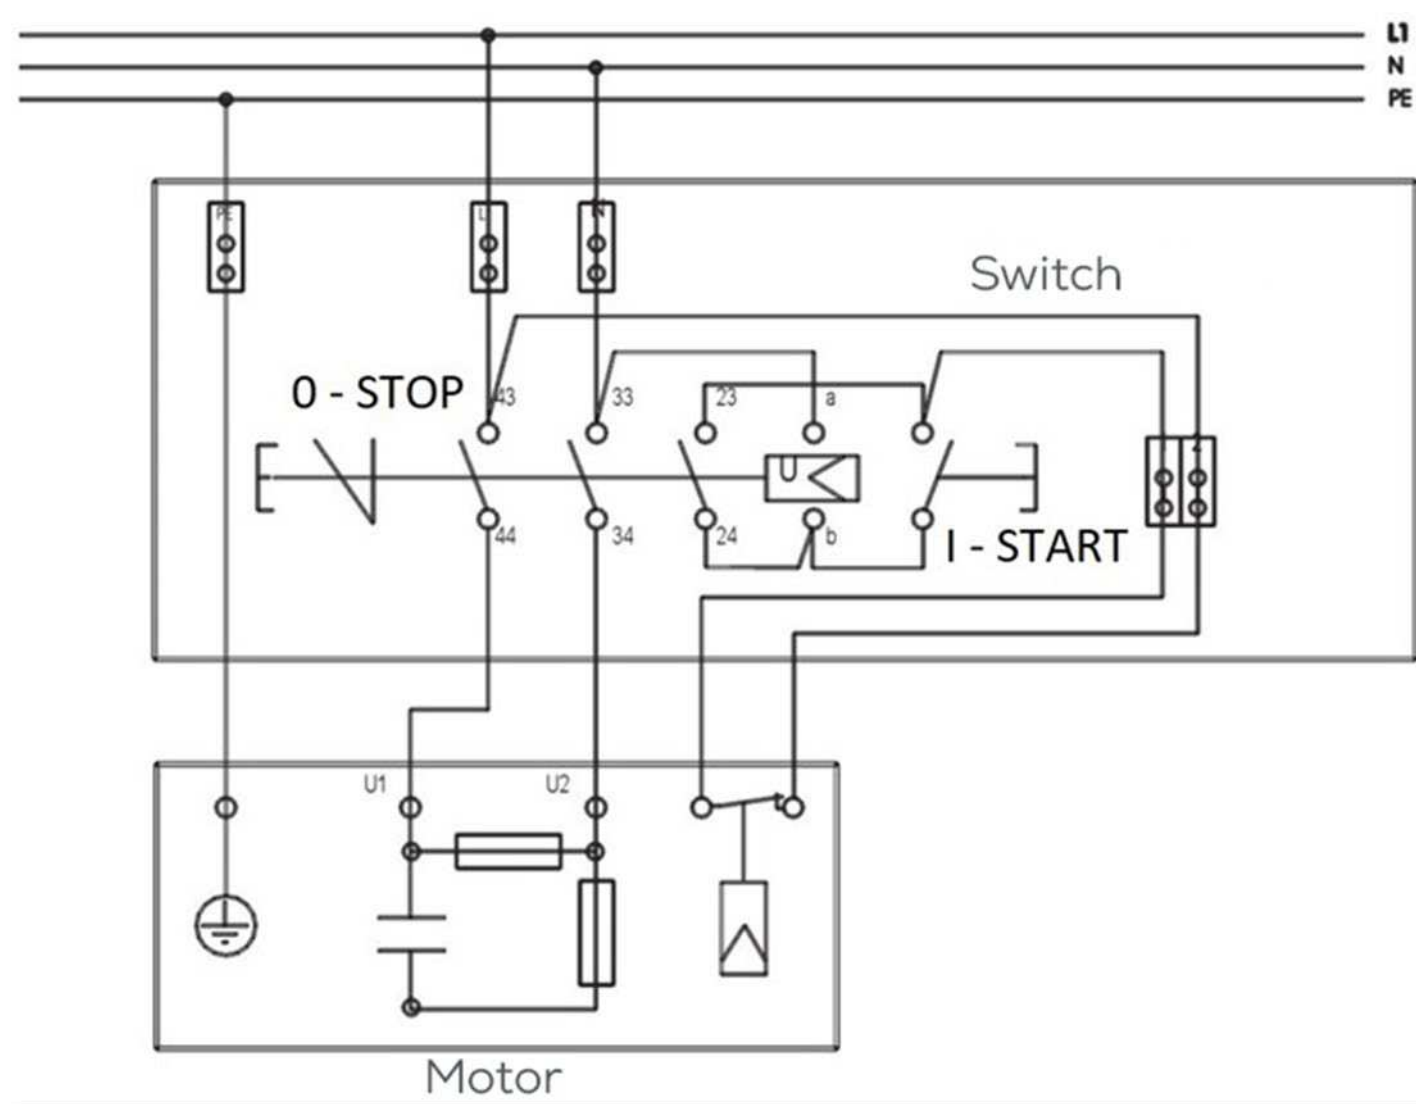

10 NOISE LEVEL

The noise level emitted by this machine during operation will depend on the type of material being ground and the type of grinding wheel. For this reason, the measurement data is relative.

The risk of hearing damage to the operator depends on the length of exposure to noise.

The operator must wear ear defenders or other appropriate personal protective equipment when the sound power exceeds 85 dB(A) in the workplace.

- Average sound pressure level:
 $L_{pAm} = 88.3 \text{ dB(A)}$
- Sound power level:
 $L_{wA} = 103.4 \text{ dB(A)}$
- Sound pressure level at the workstation:
 $L_{pA} = 90.7 \text{ dB(A)}$

The sound power was calculated taking into account factors such as: reverberation at the test site, ground noise absorption, and other factors that may interfere with measurements. This estimate allows us to state that the degree of error in the values obtained is around 3 dB(A).

The values given are emission levels and not necessarily levels that allow for safe working. Although there are correlations between emission levels and exposure levels, these cannot be used reliably to determine whether additional precautions are necessary. Parameters that influence actual exposure levels include workshop characteristics, other sources of noise, etc., i.e., the number of machines and neighboring manufacturing processes. In addition, permissible exposure levels may vary from country to country. However, this information allows the machine user to make a better risk assessment.



11 VIBRATION LEVEL

The data relating to the vibrations transmitted by this machine during the work process will depend on the type of material being ground and the type of grinding wheel. For this reason, the measurement data is relative.

Exposure to vibrations can have serious consequences for the health of workers. A person exposed daily to high-amplitude vibrations may develop neurological and joint disorders in the long term.

The exposure level assessment is based on the calculation of the daily exposure value $A(8)$, normalized to a reference period of 8 hours.

Whenever an employee is exposed to $A(8)$ vibrations exceeding the daily exposure level triggering action set at 2.5 m/s^2 , the

These values must be taken into account when assessing the level of exposure.

Regular and frequent exposure to a highly vibrating work tool exposes workers' hands and arms to chronic disorders known as "vibration syndrome."

- Average hand/arm vibration level:
 $A(8) < 2.5 \text{ m/s}^2$

employer must assess the risks of the task assigned to the employee and implement control measures.

Exposure values for vibrations transmitted to the hand-arm system:

- Daily exposure limit value $A(8) = 5 \text{ m/s}^2$
- Daily exposure action value $A(8) = 2.5 \text{ m/s}^2$

12 ENVIRONMENTAL PROTECTION

Your machine contains many recyclable materials.

This logo indicates that used machines must not be mixed with other waste.

This will ensure that the machines are recycled under the best conditions, in accordance with European Directive 2012/19/EU on waste electrical and electronic equipment.

Contact your local council or dealer to find out where your nearest collection points for used machines are located.

Thank you for your cooperation in protecting the environment.



13 WARRANTY

If the machine is covered by warranty, it must be serviced exclusively by an authorized after-sales service center.

The machine warranty is valid for 2 years from the date of purchase by the user.

This product comes with an additional 2-year warranty extension, provided that the user registers the product on the PEUGEOT PROFESSIONAL TOOLS website (www.peugeot.outils-pro.com) within 30 days of the date of purchase. This warranty extension is subject to the same conditions as the initial warranty.

Accessories and consumables are not covered by the warranty.

It is important to keep the invoice, which serves as the warranty certificate.

The warranty is limited to the repair or replacement of defective parts free of charge, after evaluation by the manufacturer.

For any requests for information or spare parts relating to the machine, it is essential to provide the exact information shown on the nameplate.

The warranty does not cover damage caused by the user or by a repairer not approved by Tivoly.



Link to the General Warranty Terms and Conditions:

CE AL DECLARATION OF CONFORMITY "ORIGINAL"

The undersigned (Manufacturer/Importer):

TIVOLY

266 ROUTE PORTES DE TARENTAISE 73790 TOURS-EN-SAVOIE

Declares that the following new machine:

- Designation: **COMBINED BENCH GRINDER AND BRUSH**
- Brand: **PEUGEOT PROFESSIONAL TOOLS**
- Model: **PCTMB200**
- Reference: **PPM00100003**
- Serial number:

Complies with applicable harmonized legislation:

- **Machinery Directive 2006/42/EC (until January 19, 2027)**
- **EU Regulation 2023/1230 (from January 20, 2027)**

Complies with the essential safety requirements applicable to it:

- **Low Voltage Directive 2014/35/EU**
- **Electromagnetic Compatibility Directive 2014/30/EU**
- **WEEE Directive 2012/19/EU**
- **RoHS-2 Directive 2011/65/EU**
- **REACH 1907/2006**
- **Noise Directive 2003/10/EC**
- **Vibration Directive 2002/44/EC**

Done at TOURS-EN-SAVOIE
On

Stéphane Le Mounier
Managing Director



Person authorized to compile the technical file:

- **Mr. LE MOUNIER – TIVOLY – 266 ROUTE PORTES DE TARENTAISE 73790 TOURS-EN-SAVOIE**

	TIVOLY: Registered office: 266 ROUTE PORTES DE TARENTAISE 73790 TOURS-EN-SAVOIE www.peugeot-outils-pro.com	USER SERVICE Tel: +33(0)4 79 89 59 00
	In its ongoing efforts to improve the quality of its products, TIVOLY reserves the right to modify their characteristics. The information, photos, exploded views, and diagrams contained in this document are not contractual.	July 2026 Notice PCTMB200